

USER GUIDE

Built-in oven

HWO60S4 single models

NZ AU

Haier

CONTENTS

Safety and warnings	2
Oven, clock and timer controls	
Models with analogue 120' timer	4
Models with six-button clock	5
Models with touch control clock	6
First use	8
Using your oven	9
Oven functions	10
Cooking chart	11
Using the electronic timer - models with six button clock	12
Automatic cooking - models with six button clock	13
Using the electronic timer - models with touch control clock	14
Automatic cooking - models with touch control clock	16
Care and cleaning	18
Troubleshooting	25
Warranty and service	26

IMPORTANT! **SAVE THESE INSTRUCTIONS**

The models shown in this user guide may not be available in all markets and are subject to change at any time. For current details about model and specification availability in your country, please go to our website listed on the back cover or contact your local Haier dealer.

SAFETY AND WARNINGS

Your built-in oven has been carefully designed to operate safely during normal cooking procedures. Please keep the following guidelines in mind when you are using your oven:

WARNING!



Electrical Shock Hazard

Disconnect the oven from the power supply before any cleaning or maintenance.

Failure to follow this advice may result in electrical shock.

WARNING!



Hot Surface Hazard

Accessible parts may become hot when in use.

To avoid burns and scalds, keep children away.

Use oven mitts or other protection when handling hot surfaces such as oven shelves or dishes.

Use care when opening the oven door. Let hot air or steam escape before removing or replacing food.

Do not touch heating elements or interior surfaces of the oven. Heating elements may be hot even though they are dark in colour. Interior surfaces of an oven become hot enough to cause burns. During and after use, do not touch, or let clothing or other flammable materials contact heating elements or interior surfaces of the oven until they have had sufficient time to cool.

Other surfaces of the appliance may become hot enough to cause burns - among these surfaces are the oven vent, the surface near the oven vent, and the oven door.

Failure to follow this advice could result in burns and scalds.

WARNING!



Cut Hazard

Take care - some edges are sharp.

Failure to follow this advice may result in electrical shock.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electrical shock, injury to persons, or damage when using the oven, follow the important safety instructions listed below:

- **Read all the instructions before using the oven. Use the oven only for its intended purpose as described in these instructions.**
- **Proper installation: be sure your appliance is properly installed and earthed by a qualified technician.**
- **Isolating switch: make sure this oven is connected to a circuit which incorporates an isolating switch providing full disconnection from the power supply.**
- **Household appliances are not intended to be played with by children.**
- **Do not leave children alone. Children should not be left alone or unattended in the area where the appliance is in use. They should never be allowed to sit or stand on any part of the appliance.**
- **Children or persons with a disability which limits their ability to use the appliance, should have a responsible person to instruct them in its use. The instructor should be satisfied that they can use the appliance without danger to themselves or their surroundings.**
- **During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven. Accessible parts may become hot during use. To avoid burns young children should be kept away.**
- **Do not use your appliance for warming or heating the room.**
- **Do not place heavy objects on the oven door.**
- **Wear proper apparel. Do not wear loose fitting or hanging garments when using the appliance. They could ignite or melt if they touch an element or hot surface and you could be burned.**
- **User servicing: do not repair or replace any part of the appliance unless specifically recommended in the manual. All other servicing should be referred to a qualified technician.**
- **Do not use water on grease fires. Smother the fire or flame or use a dry chemical or foam type extinguisher.**
- **Use only dry oven mitts or potholders. Moist or damp potholders on hot surfaces could result in burns from steam. Do not let potholders touch hot areas or heating elements. Do not use a towel or a bulky cloth for a potholder. It could catch fire.**
- **Do not heat unopened food containers. They can build up pressure that may cause the container to burst and result in injury.**
- **Safe food handling: leave food in the oven for as short a time as possible before and after cooking. This is to avoid contamination by organisms which may cause food poisoning. Take particular care during warm weather.**
- **Always keep oven vents unobstructed.**
- **Do not operate your appliance by means of an external timer or separate remote-control system.**
- **If the power supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.**
- **Under unfavourable electrical supply conditions, the appliance may cause temporary voltage drops.**

MODELS WITH ANALOGUE 120' TIMER

OVEN CONTROLS AND USING THE ANALOGUE 120' TIMER

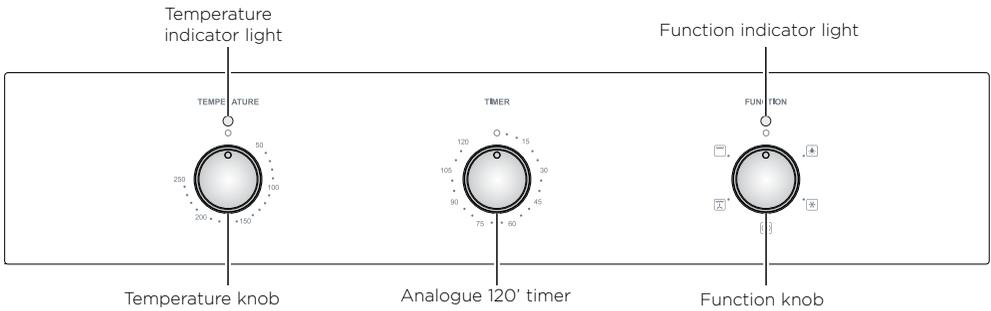


Fig. 1 Control panel – Four-function models with analogue 120' timer

Using the analogue 120' timer

You can use the analogue 120' timer at any time, even when the oven is not in use.

IMPORTANT!

The timer does NOT turn the oven off.

To set the timer

- ① Turn the timer knob clockwise all the way around to the 0 mark (120-minute countdown).
- ② To set the timer to less than 120 minutes, turn the knob anti-clockwise to the required length of time.



Fig. 2 Setting the analogue 120' timer

When the timer is set

- The timer will immediately start counting down: you will see the knob slowly rotating anti-clockwise towards the 0 mark.
- To cancel the setting, turn the knob anti-clockwise back to the 0 mark.

When the set time is up

The timer will ring.

MODELS WITH SIX-BUTTON CLOCK OVEN CONTROLS AND SETTING THE CLOCK

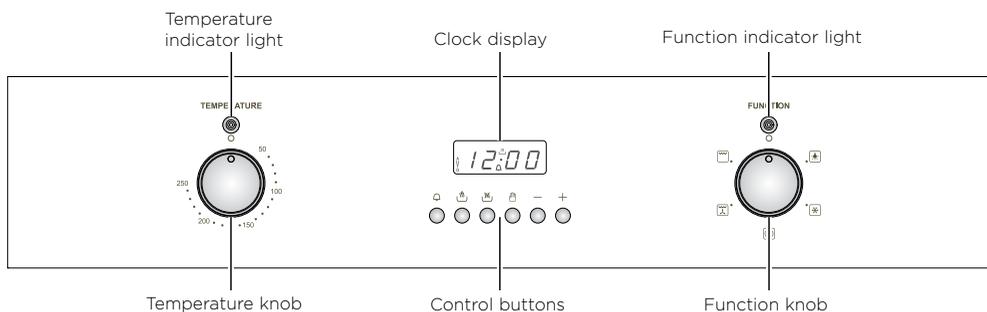


Fig. 3 Control panel – Four-function models with six button clock

Buttons

-  sets the timer
-  sets the cooking time for automatic cooking
-  sets the stop time for automatic cooking
-  sets the clock, returns oven to manual mode, cancels automatic cooking
-  decreases time and beep volume
-  increases time

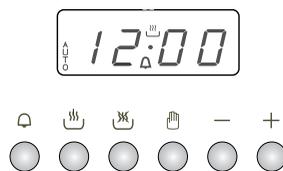


Fig. 4 Clock display and control buttons

Illuminated symbols

	IF THE DISPLAY SHOWS	IT MEANS THAT	FOR MORE INFORMATION
A U T O	Flashing with 0-00	The clock needs to be set.	See instructions below.
	Steadily lit	The oven is set for automatic cooking.	See section 'Automatic cooking'
	Flashing and Beeping	Automatic cooking has finished or has been set incorrectly (the stop time is before the time of day).	
	Steadily lit	The timer is set.	See section 'Using the electronic timer'
	Flashing and Beeping	The set time is up.	

To set the clock

When the power to the oven is turned on or restored after a power failure, 0-00 and 'AUTO' will flash in the display.

- ① Press .
- ② Press  and  until you have the correct time of day.

MODELS WITH TOUCH CONTROL CLOCK OVEN CONTROLS AND SETTING THE CLOCK



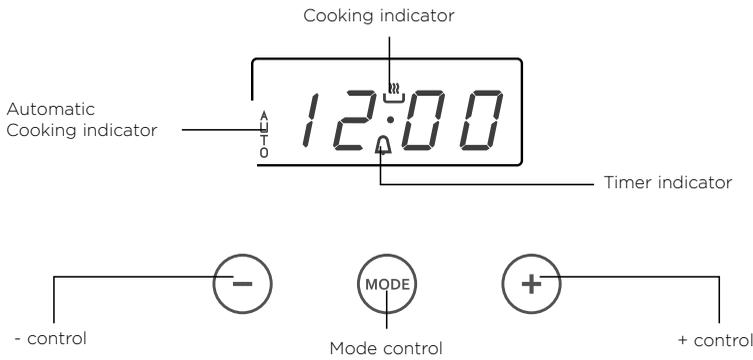


Fig. 5 Control panel - Four-function models with touch control clock

MODELS WITH TOUCH CONTROL CLOCK OVEN CONTROLS AND SETTING THE CLOCK

Touch controls

The controls are operated by touch - you do not need to apply pressure. Use the ball of your finger rather than the tip for best results

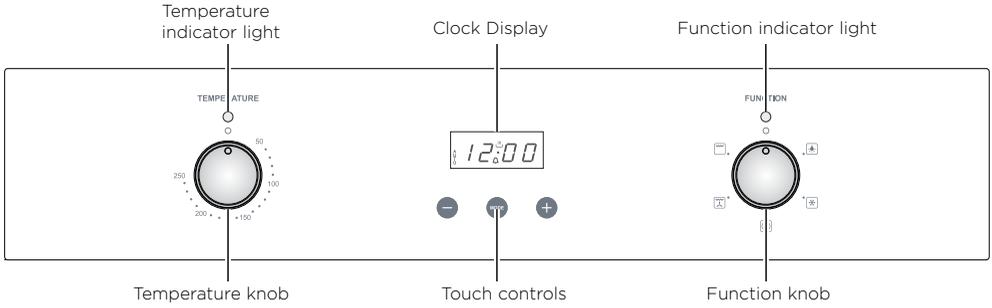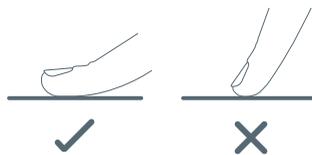

To set the clock

- When the power to the oven is first turned on, or there has been a power failure, 0-00 and 'AUTO' will show in the display.
 - The oven will not work until the clock has been set.
- ① Touch and hold the mode control (MODE) for 3 seconds.
 - ② Set the correct time of day by touching the (-) and (+) controls.
 - ③ After 8 seconds the oven will beep confirming the time is set.
 - ④ The cooking indicator (flame icon) will show in the display.

To change the time

- ① Touch and hold the (-) and (+) controls together for 3 seconds.
- ② Set the new time by touching the (-) and (+) controls.
- ③ After 8 seconds the oven will beep, confirming the new time is set.

IMPORTANT!

Changing the time will delete any automatic functions that have been set.

IF THE DISPLAY SHOWS	IT MEANS THAT	FOR MORE INFORMATION
A U T O	Flashing	The oven is ready to be set for cooking with auto-off.
	Steadily lit	The oven is set for cooking with auto-off.
	Flashing and Beeping	Cooking with auto-off has finished.

FIRST USE

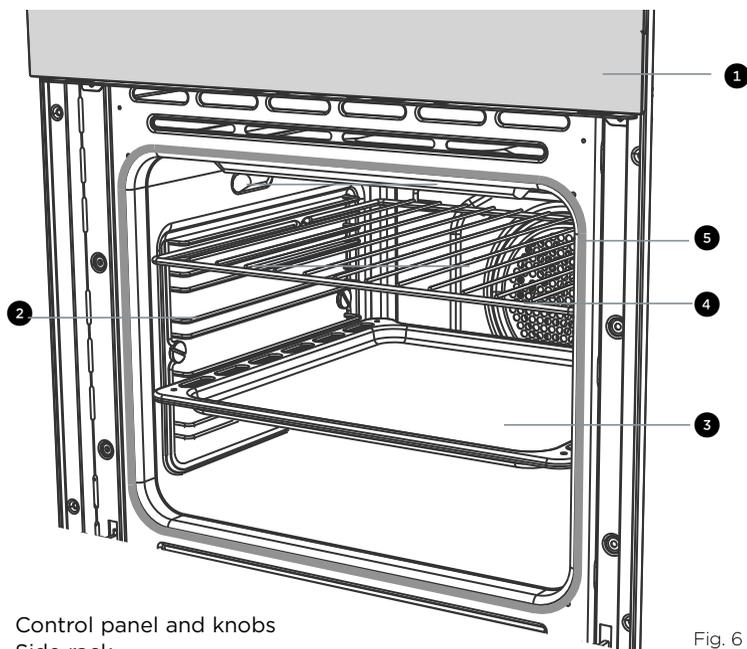


Fig. 6 Oven parts

- ① Control panel and knobs
- ② Side rack
- ③ Grill tray
- ④ Flat oven shelf
- ⑤ Rubber seal

Not illustrated:

- Grill rack

Before using your new oven for cooking or baking, please:

- ① Read this user guide, taking special note of the 'Safety and warnings' section.
- ② Remove all accessories and packaging. Make sure you peel any protective film off the surfaces. Discard the film immediately, keeping it out of reach of children.
- ③ Models with six button or touch control electronic clock only: set the clock. The oven will not work until this has been done.
 - see 'Oven controls and setting the clock' for instructions.
- ④ Slide in the shelf and grill tray as shown in 'Using your oven'.
- ⑤ Condition the oven. Heat it on maximum temperature for the times below:

30 minutes using  Fan Forced

15 minutes using  Grill

- There will be a distinctive smell during the conditioning. This is normal, but make sure your kitchen is well ventilated.
- ⑥ Once cooled, wipe out the oven with a damp cloth and mild detergent, and dry thoroughly.

USING YOUR OVEN

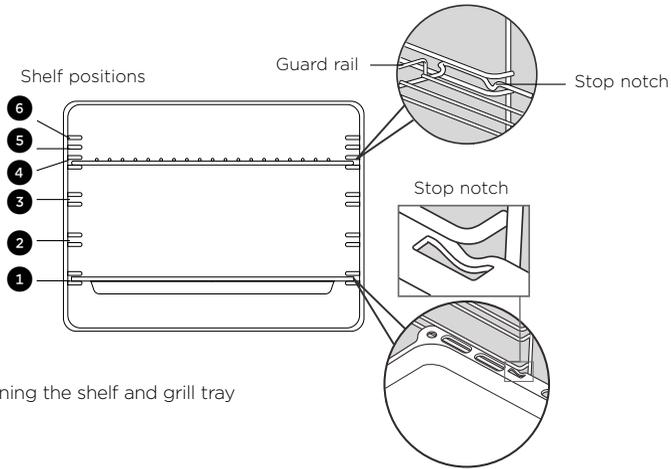


Fig. 7 Positioning the shelf and grill tray

- ① Slide in the shelf, making sure that:
 - it is between the two wires of a shelf position
 - the stop notches point down
 - the guard rail is at the back.
 - Note: the grill tray should be positioned between the two wires of a shelf position and orientated as shown.
- ② Select a function.
 - The oven light will come on.
 - the function indicator light will also come on.
- ③ Set the temperature.
 - The temperature indicator light will come on.
 - It will go out when the oven has reached the set temperature.

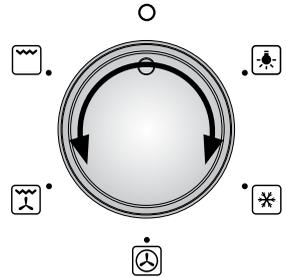


Fig. 8 Turning the function knob

During cooking

- The temperature indicator light may come on and go out again as the oven maintains the temperature.
- A cooling fan may automatically come on at different times and blow out warm air below the control panel.
It may continue to run even after the oven has been turned off. This is normal.
- Set the temperature back to off (O) before changing functions.

When you have finished cooking

Turn both the function and temperature knobs to the off (O) position.

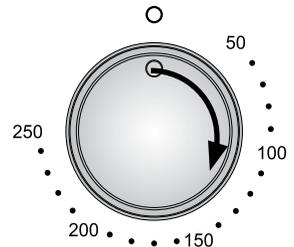


Fig. 9 Turning the temperature knob

OVEN FUNCTIONS



OVEN LAMP

Only the oven light comes on. It remains on in all the cooking functions.



DEFROST

Only the oven fan comes on. Use with the temperature set to off (O). The fan circulates air around the oven, speeding up the defrosting process by approximately 30%. Note: this function is not for cooking food.



FAN FORCED

Great for multi-shelf cooking. The consistent temperature ensures baking is well risen. Cookies are crisp on the outside and chewy in the middle, meat and poultry are deliciously browned and sizzling while remaining juicy and tender.



FAN GRILL

Use with the oven door closed and the temperature set no higher than 220°C. Ideal for roasting tender cuts of meat and poultry. Use the lower shelf positions for larger items eg a whole chicken.



GRILL

Use with the oven door closed and the temperature set no higher than 225°C. For best results, use the shelf position 4 when you want quick browning (eg toast).

IMPORTANT!

Safe food handling: leave food in the oven for as short a time as possible before and after cooking or defrosting. This is to avoid contamination by organisms which may cause food poisoning. Take particular care during warmer weather.

COOKING CHART

Please note:

- The settings in the following chart are guidelines only. Follow the instructions in your recipe or on packaging and be prepared to adjust the oven settings and baking times to achieve the best possible results for you.
- Shelf positions are counted from the oven floor up (1 is the lowest, 4 or 6 the highest).
- Arrange oven shelf before you turn the oven on, then preheat the oven to the required temperature (until the temperature indicator light goes out).
- The oven is ideal for multi-shelf baking or larger items.
- Settings in bold indicate the recommended oven function.
- The shelf positions recommended below use the flat oven shelf.

FOOD		 FAN FORCED		
		Shelf position	Temperature (°C)	Time (mins)
Small cakes	single shelf	2	150-170	13-17
	multi shelf	1	150-170	15-20
Scones	single shelf	2	210-230	8-12
	multi shelf	1	210-230	10-14
Sponge	two small (20 cm), staggered on shelf	2	170-190	25-35
	one large (26 cm)	2	175	30-40
Light fruit cake		2	155-165	80-100
Rich fruit cake	exact baking time will depend on size	2	130-150	3-6 hours
Apple pie		1	185	35-45
Custard tart		not recommended		

MODELS WITH SIX-BUTTON CLOCK USING THE ELECTRONIC TIMER

You can use the timer at any time, even when the oven is not in use.

IMPORTANT!

The timer does NOT turn the oven off.



To set the timer

- ① Press . 0.00 will show and the symbol will start flashing.
 - ② Press and to set the time you want (up to 23 hours and 59 minutes, in 1-minute steps).
- After a few seconds, the clock will show the time of day with the symbol steadily lit.
 - The timer is now counting down.

 


Fig. 10 Clock display and control buttons

To check the remaining time

Press .

To cancel the timer

- ① Press .
 - ② Press until the time is reset to 0:00
- After a few seconds, the clock will show the time of day.

When the set time is up

- The timer will beep and the symbol will flash. Press to stop the beeping and turn the timer off.
- After a few seconds, the clock will show the time of day.

To adjust the beep volume

Press to hear the next volume level. The last one selected will be stored.

MODELS WITH SIX-BUTTON CLOCK AUTOMATIC COOKING

To set the oven for automatic cooking

- ① Set the oven:
 - Check the clock shows the correct time (eg 12:07).
 - Select the function and set the temperature.
The oven will turn on.
- ② Set the cooking time:
 - Decide how long the food will take to cook, allowing time for preheating if necessary (eg 40 minutes).
 - Press .
 - Use  and  to set the cooking time.
AUTO will show in the display.
- ③ Set the stop time:
 - Decide when you want your food to be ready by (eg 13:30).
 - Press .
 - Use  and  to set the stop time.

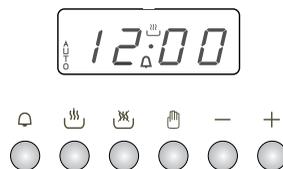


Fig. 11 Clock display and control buttons

You can turn the oven on manually and set it to turn off automatically by setting the stop time (step 3 above).

When automatic cooking is set

- If there is time before cooking starts, the oven will turn off and the current time of day and AUTO will show in the clock display, indicating that the oven is set for automatic cooking. Note: the cooling fan may stay on.
- The oven will automatically turn on at the required time (eg 12:50) and turn off at the set stop time (eg 13:30).
- To see the remaining cooking time, press .
- To see the set stop time, press .
- To cancel automatic cooking, press  and turn the function and temperature knobs to O (off).

When the stop time is reached

- The oven will turn off, the timer will beep and AUTO will flash.
- ① Press  to stop the beeping and return the oven to manual mode.
 - ② Turn the function and temperature knobs to O (off).

MODELS WITH TOUCH CONTROL CLOCK USING THE ELECTRONIC TIMER

IMPORTANT!

The timer does not turn the oven off.

- You may use the timer at any time, even when you are not cooking.
- The timer may be set for up to 23 hours and 59 minutes.

To set the timer

- ① Touch and hold the mode control  for 3 seconds.
 - The timer indicator  will flash continuously.
- ② Set the time by touching the  and  controls.
 - After 8 seconds the oven will tone confirming the timer is set.
 - The timer indicator  will glow steadily.
 - The display will return to time of day.

To check the time remaining

- ① Touch and hold the mode control  for 3 seconds.
 - The display will show the time remaining.
 - If the time remaining is greater than one minute, it will show in hours and minutes.
 - If the time remaining is less than one minute it will show in seconds.
 - After 8 seconds the display will return to the time of day.

To change or cancel the timer

- ① Touch and hold the mode control  for 3 seconds.
 - The time remaining will be displayed.
- ② Set the new time by touching the  and  controls.
- ③ After 8 seconds the oven will beep to indicate the new time is set.
- ④ To cancel, set the new time to 0.

When the time is up

- The timer will beep.
 - The timer indicator  will flash continuously.
- ① Touch and hold the mode control  for 3 seconds.
 - The beeping will stop.
 - The timer indicator light  will go out.

OR

- ① Touch the  and  controls to stop the beep and then touch and hold the mode control  for 3 seconds to turn off the timer indicator .
- ② Turn off the oven (function and temperature knobs) to 0 (off) if cooking is completed.

MODELS WITH TOUCH CONTROL CLOCK USING THE ELECTRONIC TIMER

To change the Timer Volume

You may choose from three volume levels.

To select a volume

- ① Touch and hold the  and  controls together for 3 seconds.
- ② Touch the Mode control .
 - the display will show the current volume (Lan 1, Lan2 or Lan3)
- ③ Touch the  control.
 - the oven will beep at the level displayed
- ④ Repeat until you have chosen a volume
- ⑤ After 8 seconds the oven will beep confirming the new volume setting and the display will return to the time of day.

MODELS WITH TOUCH CONTROL CLOCK AUTOMATIC COOKING

To set the oven for automatic cooking

- ① Set the oven
 - Check the clock shows the correct time (eg 11:10).
 - Select the function and set the temperature. The oven will turn on.

- ② Set the cooking (duration) time
 - Decide how long the food will take to cook, allowing time for preheating if necessary (eg 40 minutes)
 - Touch and hold the mode control  for 3 seconds, then
 - Touch the mode control  again. *dur* will show in the display
 - Touch the  and  controls to set the cooking time. 'AUTO' and the cooking indicator  will flash
 - After 8 seconds the time will be set and the 'AUTO' indicator remains on.

- ③ Set the End time
 - Decide when you want your food to be ready (eg 12.40)
 - Touch and hold the mode control  for 3 seconds, then
 - Touch the mode control  twice. The display will show *End*.
 - Note: while *dur* is being displayed you can change to *End* by touching the mode control  once.
 - Use the  and  controls to set the time of day you wish to turn the oven off. The 'AUTO' indicator and the cooking indicator  will flash.
 - After 8 seconds the time will be set and the 'AUTO' indicator remains on.

You can turn the oven on manually and just set it to turn off automatically by setting the end time.

- ④ When automatic cooking is set
 - If there is time before cooking starts, the oven will turn off and the current time of day and 'AUTO' will show in the clock display, indicating that the oven is set for automatic cooking. Note: the cooling fan may stay on.
 - The oven will automatically turn on at the required time (eg 12:00) and turn off at the set end time (eg 12:40).
When the oven starts the 'AUTO' and the cooking indicator  will show in the display.

- ⑤ To see the remaining cooking time
 - Touch and hold the mode control  for 3 seconds.
 - Touch the mode control  again to see the cooking time, or touch the mode control  twice to see the end time.

MODELS WITH TOUCH CONTROL CLOCK AUTOMATIC COOKING

- ⑥ When the stop time is reached
- The oven will turn off, the timer will beep and 'AUTO' will flash.
 - Touch any control to stop the timer beeping.
 - Touch and hold the mode control  for 3 seconds to return the oven to manual mode. The cooking indicator  will glow steadily.
 - Turn the temperature and function knobs to O (off).

To Cancel Auto-off

- Touch and hold the  and  controls together for 3 seconds.
- Turn the oven temperature and function knobs to O (off).

IMPORTANT!

If you have a power interruption, it will cause any automatic cooking functions to be cancelled.

Turn off the oven manually.

CARE AND CLEANING

IMPORTANT!

- Always disconnect the oven from the power supply before any cleaning or maintenance.
- Electronic clock models: When you turn the power back on after cleaning, you will have to set the clock.
- Do not use abrasive cleaners, cloths or pads to clean any part of your oven. Some nylon scourers may also scratch. Check the label.
- See the following pages for instructions on removing and refitting different parts of the oven for cleaning.
- Before cleaning, make sure the oven is a safe temperature to touch.
- Do not use a steam cleaner.

WHAT?	HOW?	IMPORTANT!
General advice	<ul style="list-style-type: none"> • Wipe out the oven after every use. • Wipe up spills as soon as the oven is a safe temperature to touch. 	<ul style="list-style-type: none"> • Avoid leaving alkaline or acidic substances (such as lemon juice, vinegar or salty spills) on the oven surfaces. • Do not use cleaning products with a chlorine or acidic base.
Stainless steel surfaces	<ol style="list-style-type: none"> ① Wipe the soiling off with a cloth using a mild household detergent or stainless steel cleaner. ② Wipe the surface dry. ③ Use a suitable stainless steel polish. 	Immediately wipe off any caustic cleaners if they are spilled onto the oven door handle or the knobs.
External glass surfaces	Wipe with a damp cloth or use a glass cleaner.	Do not use harsh abrasive cleaners or sharp metal scrapers since they scratch the surface and may result in the glass shattering.
Oven cavity (enamel)	<ol style="list-style-type: none"> ① Remove everything from the oven: shelf and tray and the side racks. ② Remove the oven door (see instructions on following pages). ③ Wipe the inside of the oven using a household detergents or an ammonia-based cleaner. ④ Wipe clean with a damp cloth and allow to dry completely. 	<ul style="list-style-type: none"> • If using 'off the shelf' oven cleaners, always follow the manufacturer's instructions.
Side racks, oven shelf, tray	<ul style="list-style-type: none"> • Clean these using a solution of detergent and hot water. They are also dishwasher safe. • If badly soiled, soak in a solution of hot water and biological clothes washing powder to make cleaning easier. 	

CARE AND CLEANING

WHAT?	HOW?	IMPORTANT!
Rubber seal framing the oven cavity	Wipe very gently with a damp cloth and mild detergent.	<ul style="list-style-type: none">• Take care not to unhook and displace the rubber seal while cleaning it.• Take care not to spray any oven cleaner or other caustic cleaner on the rubber seal, as doing so may damage the rubber.
Knobs	<ol style="list-style-type: none">① Wipe with a damp cloth and mild detergent.② Dry thoroughly with a soft cloth.	Do not use stainless steel or oven cleaner on the knobs, as doing so may damage their coating.


CARE AND CLEANING

IMPORTANT!


- We recommend removing the door to make cleaning the interior parts of the oven easier. See below for removing and refitting the oven door.

To remove the door


- ① Open the door fully.

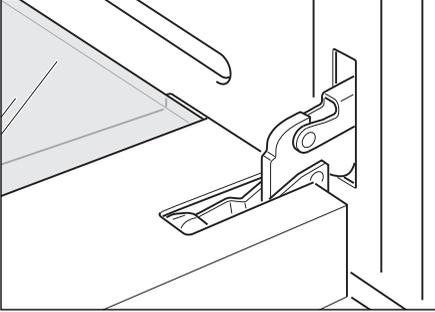


- ② Open the levers.

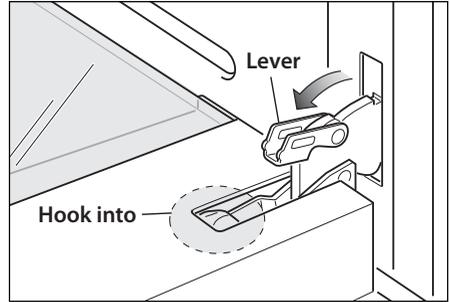


- ③ Hold the door.

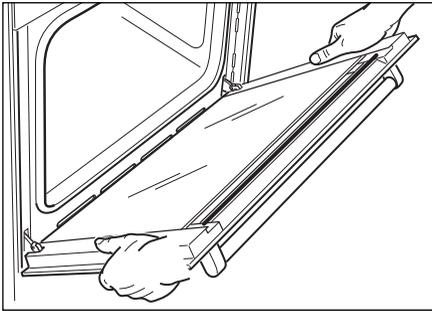

- ④ Close the door until the levers hook to it.

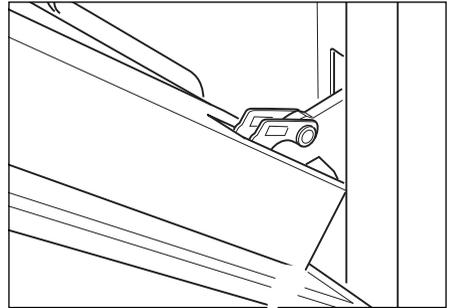

- ⑤ Disengage the hinges and remove the door.

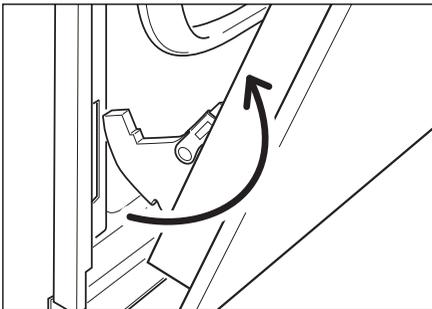

To refit the door

Repeat these steps in reverse order.

Removing and refitting the side racks

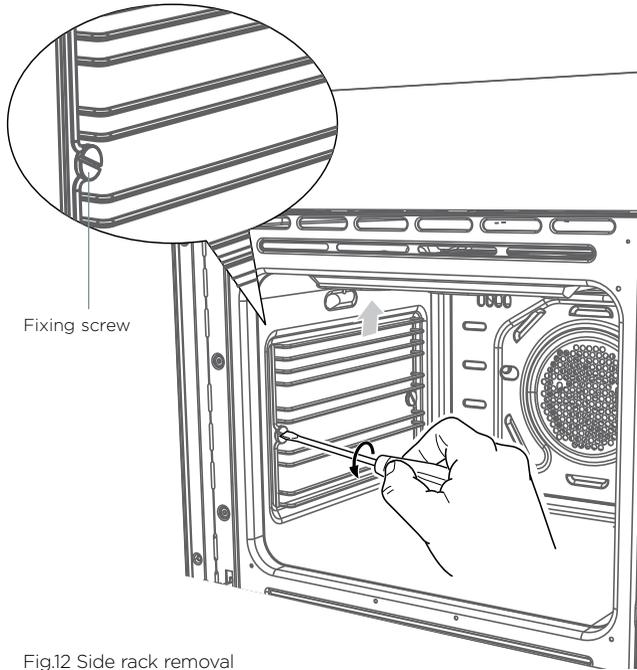


Fig.12 Side rack removal

To remove a side rack

- ① For easier access to the fixing screws, we recommend removing the oven door first. See 'Removing and refitting a top-opening oven door.'
- ② Using a small coin or a flat-head screwdriver, loosen and remove the front and back fixing screws, as shown.
- ③ Remove the side rack.

To refit a side rack

- ① Loosely screw in the back fixing screw.
- ② Position the side rack. Make sure it is the right way up, as shown.
- ③ Loosely screw in the front fixing screw.
- ④ Check that both fixing screws are straight, then tighten them.
- ⑤ If you removed the door, refit it.

CARE AND CLEANING

Replacing the oven light bulb

Note: oven bulb replacement is not covered by your warranty.

- ① Let the oven cavity and the grill element cool down.

IMPORTANT!

Disconnect the oven from the power supply before continuing.

- ② Twist the lamp cover off.
- ③ **Replace the bulb**
Unscrew and replace the bulb with a new one suitable for high temperatures (300°C) with the following specifications: 220-240V, E14 and same wattage as the bulb being replaced (check wattage stamped on the bulb).
- ④ Twist the lamp cover back on.
- ⑤ Turn the power to the oven back on. If your model has an electronic clock, set the clock.

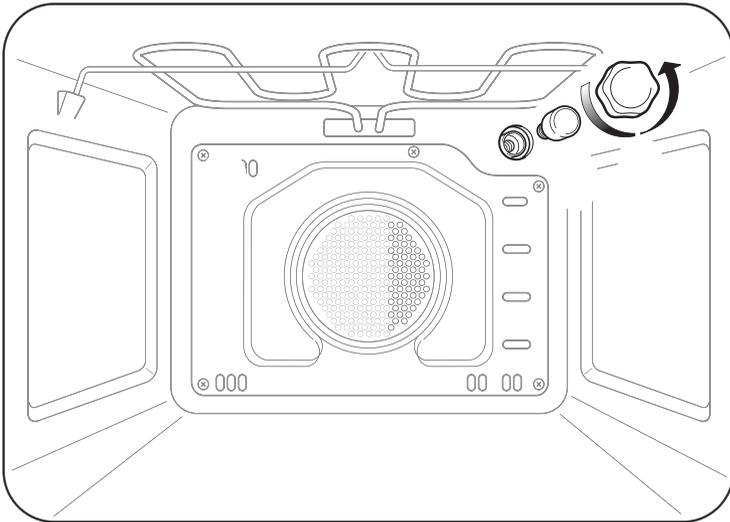


Fig.13 Removing the oven lamp

CLEANING THE DOOR GLASS


Removing and refitting the glass panes of the oven door

IMPORTANT!


- The ovens have two glass panes.
- The outer pane is not removable.
- Take care, the glass panes are heavy.
- Place the removed glass pane on a safe, soft surface.

To remove the glass panes


① Open the door fully.

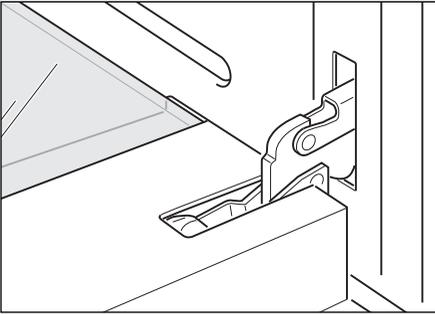


② Open the levers.

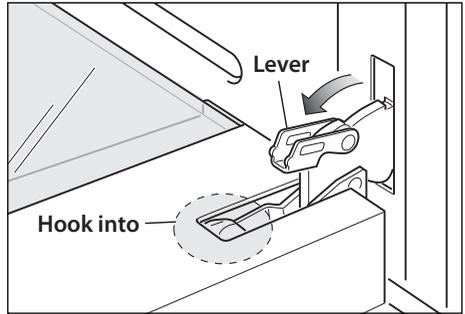


③ Close door until the levers hook to the door.

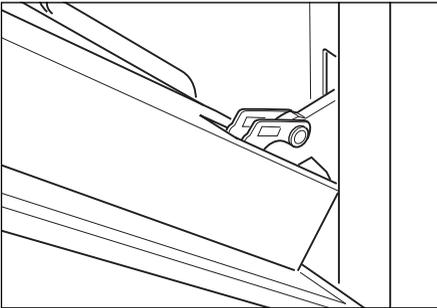

④ Remove seal.

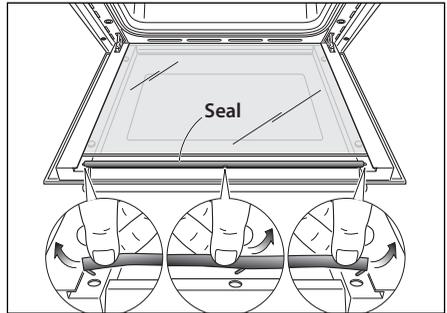

⑤ Slide out the inner pane.

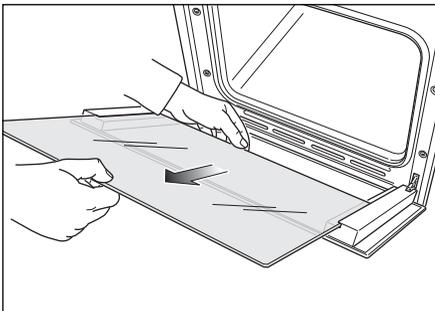

⑥ Clean the glass.

- Use a soft cloth with a solution of mild detergent or baking soda and hot water, then wipe dry.
- Wipe with a glass cleaner and dry with a soft, lint-free cloth.


IMPORTANT!

Don't use any harsh/abrasive cleaners, scouring pads, steel wool or sharp metal scrapers. These scratch the surface, which in turn could result in the glass cracking or shattering.


CLEANING THE DOOR GLASS

To refit the glass pane


- 1 Make sure the open levers firmly hook to the door.

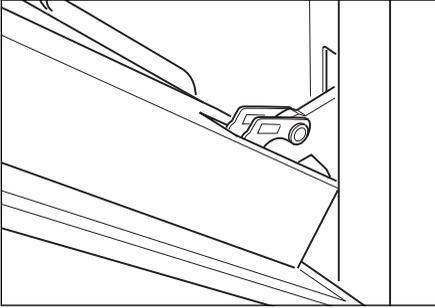


- 2 Check the rubber pads are in place.

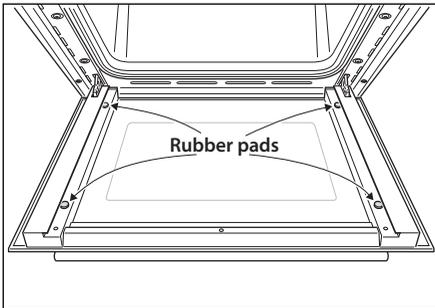


- 3 Check the pane is the right way around. You should be able to read any wording that may be on the pane.

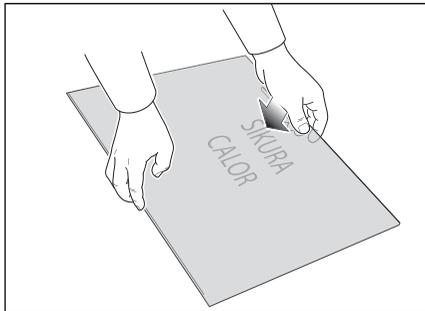


- 4 Insert the pane into the slide guides and slide it to the bottom retainers.

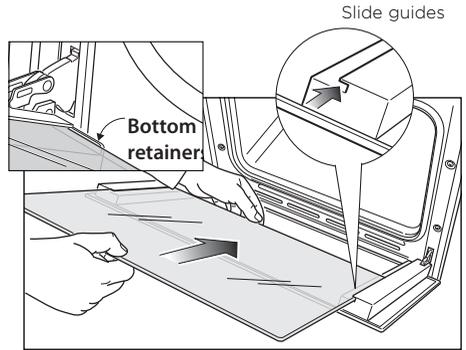

- 5 Replace the seal.

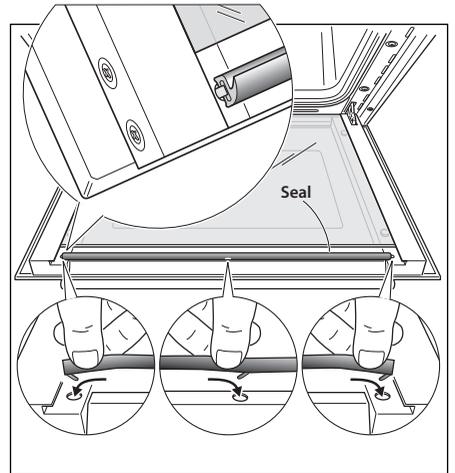

- 6 Open the door fully and close the levers.

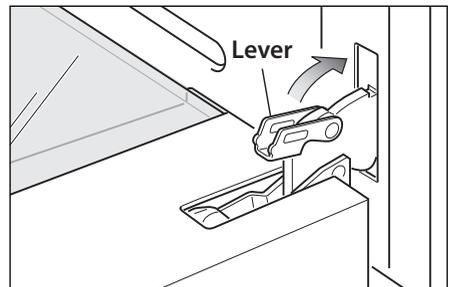

TROUBLESHOOTING

If you can't find an answer to your problem in the chart below, or if the problem cannot be fixed, you will need technical help. Contact your Authorised Service Centre or Customer Care.

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
The oven is not heating and the oven light is off.	No power supply to the oven.	Check that the oven is connected to the power supply and the power is turned on. If it is and the oven still doesn't work, there may be a power failure in your home or area.
	Models with electronic clock: the clock has not been set.	Set the clock. See 'Oven controls and setting the clock' for instructions.
Electronic clock models:  is flashing in the clock display and the oven will not work.	The power to the oven has been turned on or restored after a power failure.	Set the clock. See 'Oven controls and setting the clock' for instructions.
The oven light does not come on, but the oven is heating.	The light bulb has blown.	Replace the bulb. See instructions in 'Care and cleaning'.
Condensation: droplets of water in or around oven (e.g. on control panel, oven door, rubber seal framing the cavity, surrounding cabinetry).	Food has high moisture content or local climate (temperature, humidity) is contributing to condensation.	Some condensation is normal. You can wipe the droplets off with a soft cloth.
Fan noise and ventilation air are coming from the oven both during and after use.	A cooling fan in the oven runs to keep the oven door and control panel cool at all times. It may continue to run after the oven has been turned off.	This is normal and requires no action.
Uneven baking results.	Oven not properly preheated.	Put the food in the oven only when the temperature indicator light has gone out.

WARRANTY AND SERVICE

Before you call for service or assistance ...

Check the things you can do yourself. Refer to the installation instructions and your user guide and check that:

- ① Your product is correctly installed.
- ② You are familiar with its normal operation.

If after checking these points you still need assistance or parts, please refer to the Service & Warranty book for warranty details and your nearest Authorised Service Centre, Customer Care, or contact us through our website listed on the back cover.

This oven has been designed and constructed in accordance with the following codes and specifications:

In New Zealand and Australia:

AS/NZS 60335-1 General Requirements for Domestic electrical appliances

AS/NZS 60335-2-6 Particular Requirements for Domestic electrical cooking appliances

AS/NZS CISPR 14.1 2010 Electromagnetic Compatibility Requirements.

Complete and keep for safe reference:

Model _____

Serial No. _____

Purchase Date _____

Purchaser _____

Dealer _____

Suburb _____

Town _____

Country _____

www.haier.com.au
www.haier.co.nz

Copyright © Haier/Fisher & Paykel 2016. All rights reserved.
The product specifications in this booklet apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these specifications may change at any time. You should therefore check with your Dealer to ensure this booklet correctly describes the product currently available.

NZ AU

591032 B / 1104973-β2 07.16